


# Clean-Check® Circuit Diagrams

Circuit design to hold cylinder at end of stroke position.

Most often used in vertical cylinder application to prevent load from dropping.

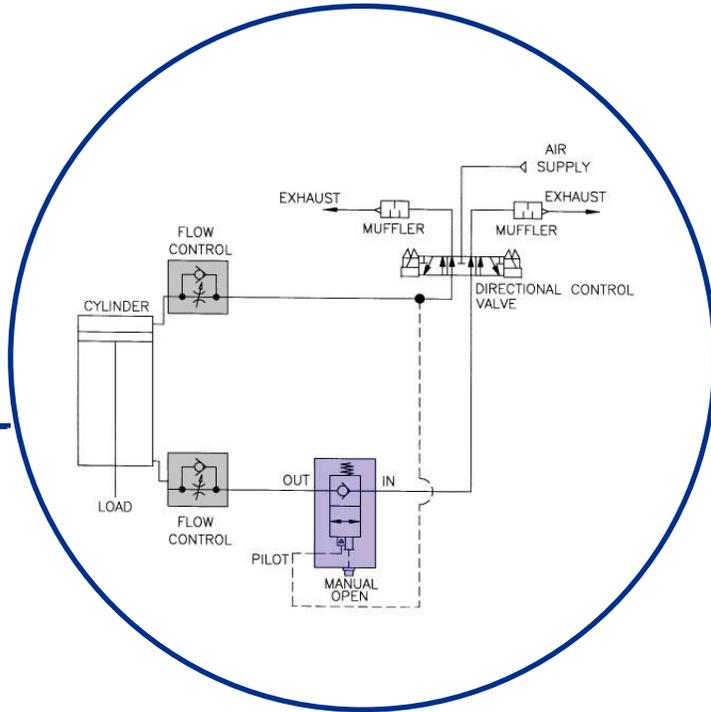

Circuit design to hold cylinder at any stopped position.

Most often used in both horizontal and vertical applications to stop cylinder motion when air is removed from system.

